


RED Series

▶ RED-110-P RED-110-L

- Line laser, **Laser class 2** ($P_{opt.} < 1 \text{ mW}$, wavelength 670 nm)
Type -P: Visible red laser spot, typ. $\varnothing 0.1 \text{ mm}$ in the focus
Type -L: Visible red laser line, typ. $0.1 \text{ mm} \times 3 \text{ mm}$ in the focus
- Reference distance 110 mm
- Working range typ. 90 mm ... 130 mm
- Automatic adjustment to the product
- Extern trigger mode
- Proof edge detection even with changing surface quality (glossy/matt, dark/bright)
- High scan frequency
- Insensitive to outside light (interference filter, pulsed laser light)
- RS232 interface (USB or Ethernet converter available)
- Windows® user interface
- 2 digital inputs (IN0, IN1)
- 3 digital outputs (OUT0, OUT1, OUT2), switching frequency max. 60 kHz
- 1 analog output (0V ... +10V or 4 mA ... 20 mA)
- Switching state indication via 3 LEDs (OUT0, OUT1, OUT2)

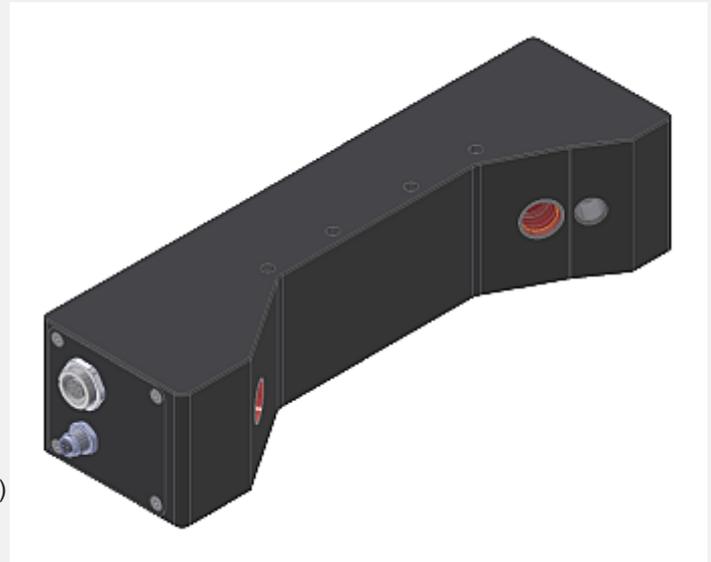


Design

Product name:

**RED-110-P
RED-110-L**

(incl. Windows® software RED-Scope)

- P = Focused laser spot (punctiform)
- L = Focused laser line

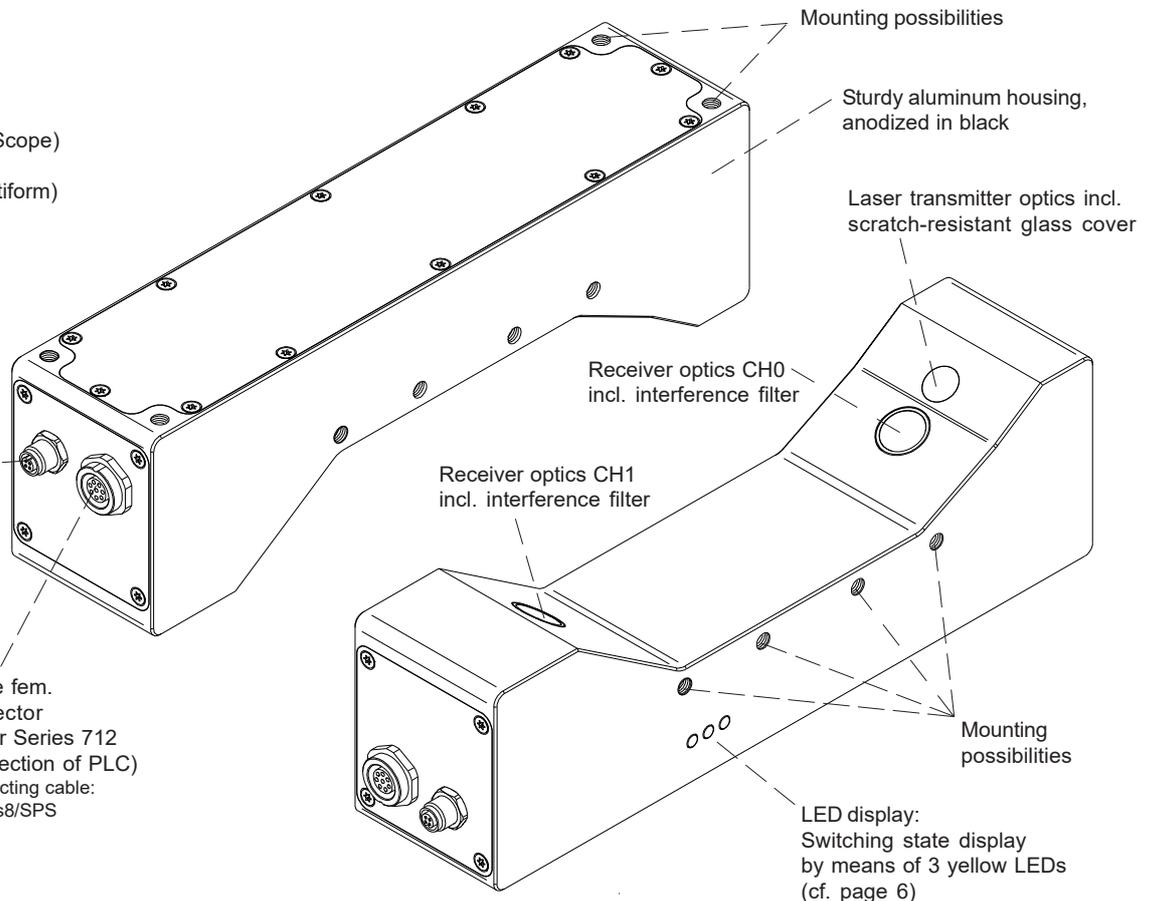





Technical Data

| Model | RED-110-P | RED-110-L |
|----------------------------|---|--|
| Voltage supply | +24VDC (± 10%), reversed polarity protected, overload protected | |
| Current consumption | < 220 mA | |
| Max. switching current | 100 mA, short-circuit proof | |
| Transmitter (light source) | semi-conductor laser, 670 nm, AC operation, 1 mW max. opt. power, laser class 2 acc. to DIN EN 60825-1. The use of this laser sensor therefore requires no additional protective measures. | |
| Transmitter control | can be switched via PC software: AC operation (LED MODE-AC) or DC operation (LED MODE-DC) | |
| Reference distance | 110 mm | |
| Laser line geometry | focused laser spot (punctiform): typ. Ø 0.1 mm | focused laser line: typ. 0.1 mm x 3 mm |
| Working range | typ. 90 mm ... 130 mm | |
| Scan frequency | LED mode AC (depends on parameterization): Frequency [Hz] Digital outputs Analog output Max. 50 000 Off Off Max. 46 600 On Off Max. 42 800 Off On Max. 40 000 On On Measurements were made with the smallest gain at the receiver (AMP1). At the highest gain (AMP8), the frequency is reduced by a factor of 10. | LED mode DC (depends on parameterization): Frequency [Hz] Digital outputs Analog output Max. 116 500 Off Off Max. 92 000 On Off Max. 82 500 Off On Max. 69 000 On On The frequency is independent of the gain set at the receiver. |
| Switching frequency | max. 60 kHz | |
| Min. height of edge | typ. 0.05 mm | |
| Digital inputs (2x) | IN0, IN1 (pin 3, pin 4): digital (0V/+24V) | |
| Digital outputs (3x) | OUT0, OUT1, OUT2 (pin 5, pin 6, pin 7): digital (0V/+Ub), bright-/dark-switching, can be adjusted under Windows® on PC | |
| Analog output (1x) | 0V ... +10V or 4 mA ... 20mA (pin 8) | |
| Band width analog signal | typ. 90 kHz (-3dB) | |
| Laser power correction | adjustable under Windows® on PC | |
| Sensitivity setting | adjustable under Windows® on PC | |
| Receiver | photo diode | |
| Optical filter | 2x interference filter for CH0 and CH1 | |
| Ambient light | max. 5000 Lux | |
| Deadtime | dynamic, adjustable under Windows® on PC | |
| Pulse lengthening | 0 ... 100 ms, adjustable under Windows® on PC | |
| Averaging | max. 32768 values, adjustable under Windows® on PC | |
| Switching state indication | 3 yellow LEDs visualize the physical state of the outputs OUT0, OUT1, and OUT2 | |
| Housing dimensions | LxWxH approx. 190 mm x 45 mm x 55 mm (without connector flanges) | |
| Housing material | aluminum, anodized in black | |
| Enclosure rating | IP54 | |
| Type of connector | connection to PLC: 8-pole fem. connector (Binder 712) connection to PC: 4-pole fem. connector (Binder 707) | |
| Connecting cables | to PLC: cab-las8/SPS or cab-las8/SPS-w to PC/RS232 interface: cab-las4/PC or cab-las4/PC-w to PC/USB interface: cab-4/USB or cab-4/USB-w to PC/Ethernet interface: cab-4/ETH | |
| Operating temp. range | -20°C ... +50°C | |
| Storage temperature range | -20°C ... +85°C | |
| Interface | RS232, parameterisable under Windows® | |
| EMC test acc. to | DIN EN 60947-5-2 | |

Dimensions

RED-110-P
RED-110-L

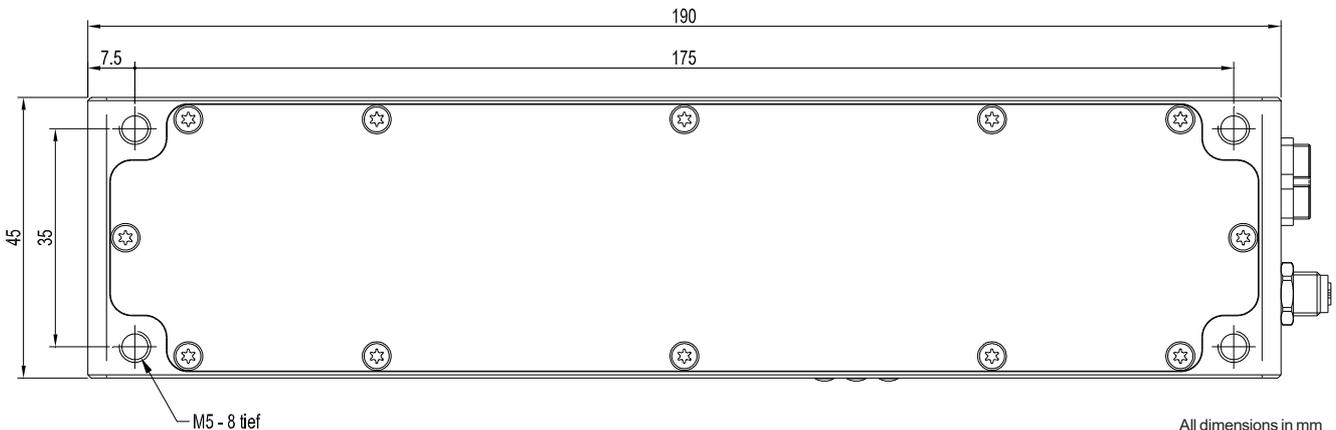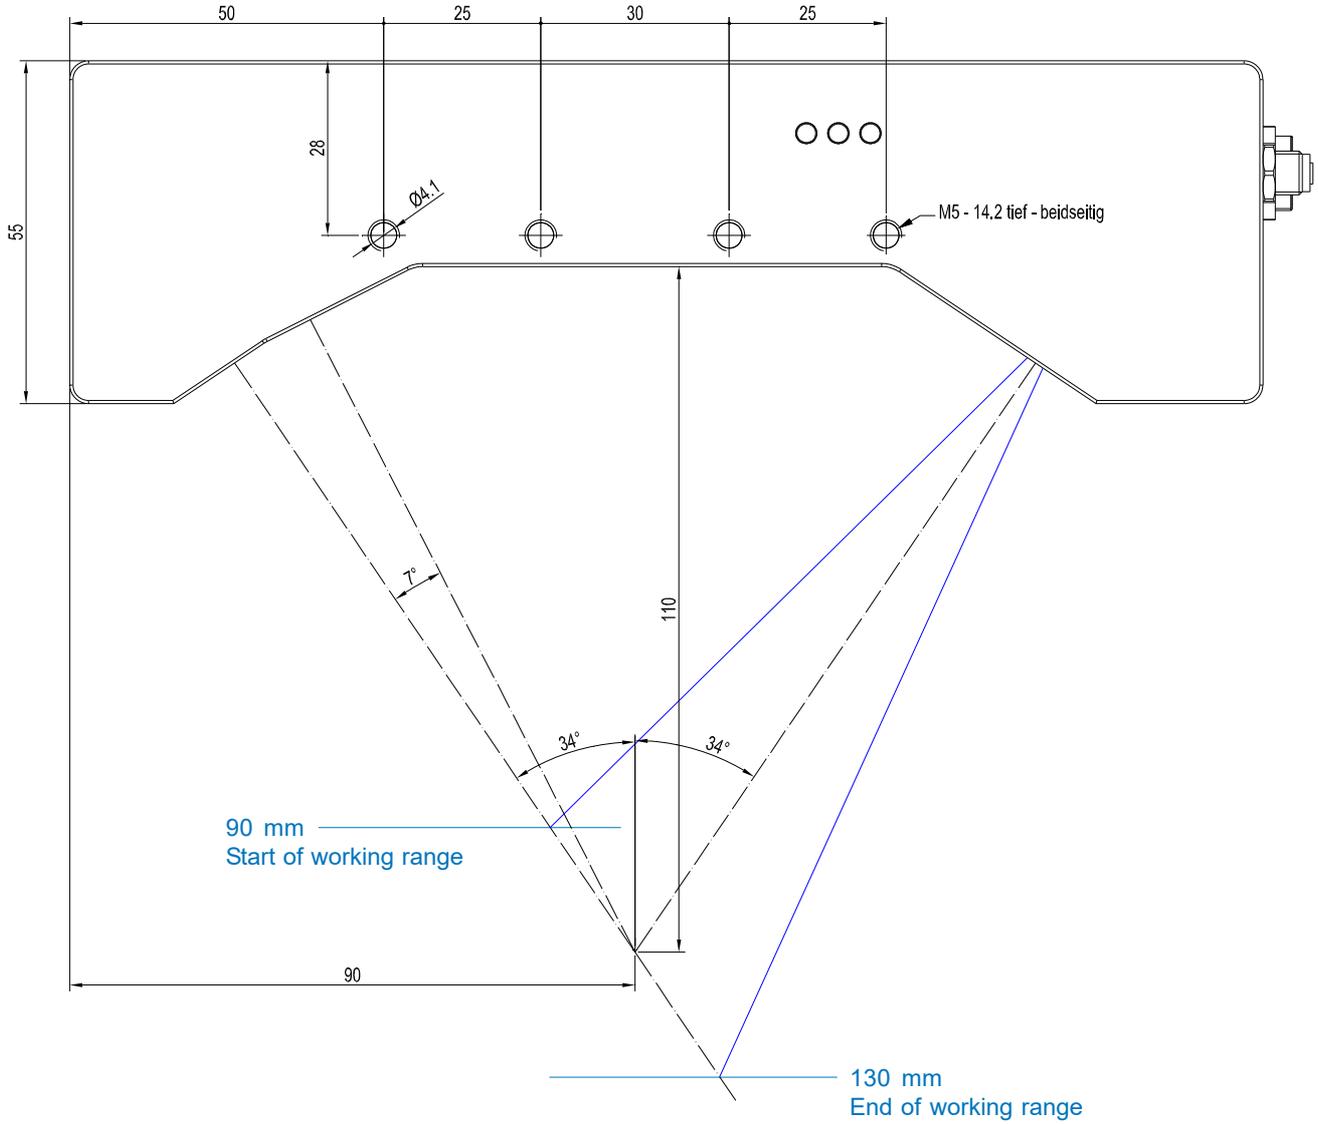

All dimensions in mm



Connector Assignment


Connection to PLC:

8-pole fem. connector Binder Series 712

| Pin: | Color: | Assignment: |
|------|--------|--|
| 1 | white | GND (0V) |
| 2 | brown | +24VDC ($\pm 10\%$) |
| 3 | green | IN0 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%) |
| 4 | yellow | IN1 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%) |
| 5 | grey | OUT0 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%) |
| 6 | pink | OUT1 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%) |
| 7 | blue | OUT2 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%) |
| 8 | red | ANALOG (0V...+10V or 4mA...20mA) |

Connecting cable:

- cab-las8/SPS-(length)
- cab-las8/SPS-w-(length) (angle type, 90°)
- (standard length 2m)

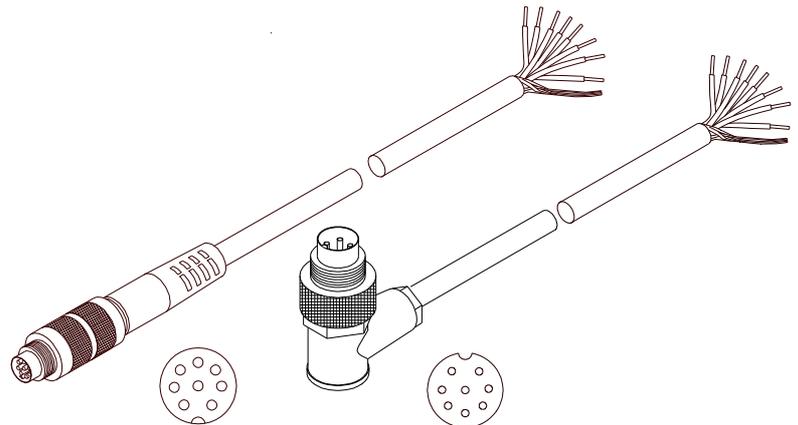

cab-las8/SPS-...
(max. length 25m, outer jacket: PUR)

cab-las8/SPS-w-...
(max. length 25m, outer jacket: PUR)

Connection to PC:

4-pole fem. connector Binder Series 707

| Pin: | Assignment: |
|------|-------------------|
| 1 | +24VDC (+Ub, OUT) |
| 2 | GND (0V) |
| 3 | RxD |
| 4 | TxD |

Connection via RS232 interface at the PC:

- Connecting cable:
- cab-las4/PC-(length)
 - cab-las4/PC-w-(length) (angle type 90°)
 - (standard length 2m)

alternative:

Connection via USB interface at the PC:

- USB converter (incl. driver software):
- cab-4/USB-(length)
 - cab-4/USB-w-(length) (angle type 90°)
 - (standard length 2m)


alternative:

Connection to local network via Ethernet bus:


- Ethernet converter (incl. software „SensorFinder“):
- cab-4/ETH-500
 - (standard length 0.5m)

Optional: External CAT5 cable, e.g.


- cab-eth/M12D-RJ45-flx-(length)

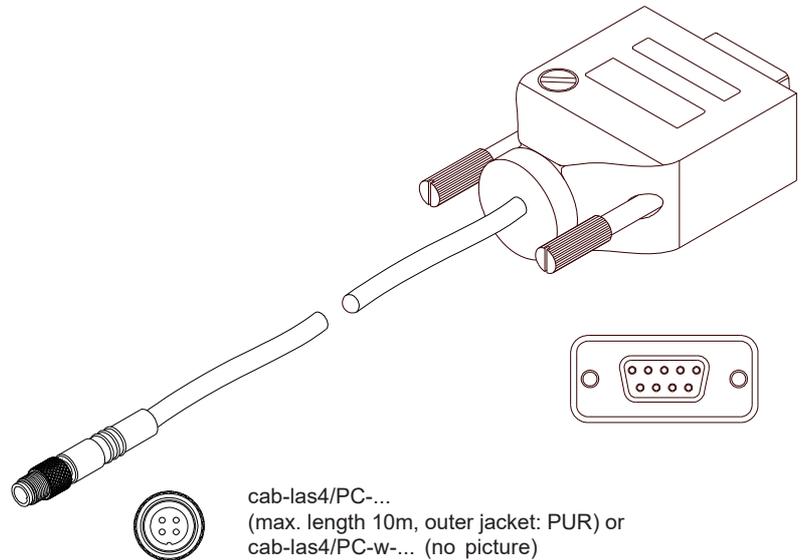

cab-las4/PC-...
(max. length 10m, outer jacket: PUR) or
cab-las4/PC-w-... (no picture)
(max. length 5m, outer jacket: PUR)

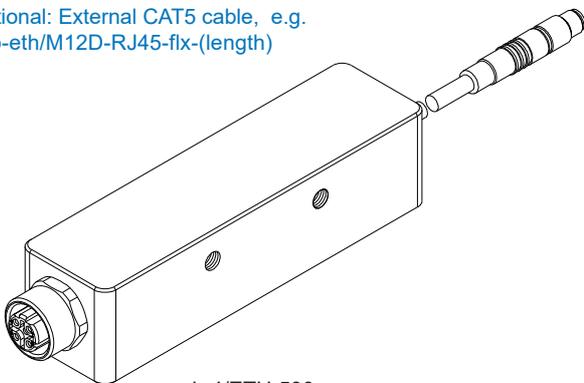

cab-4/ETH-500
(length 0.5m, outer jacket: PUR)
4-pole M12 fem. conn. (D-coded)
for connection of an external
CAT5 cable, e.g.
cab-eth/M12D-RJ45-flx-(length)

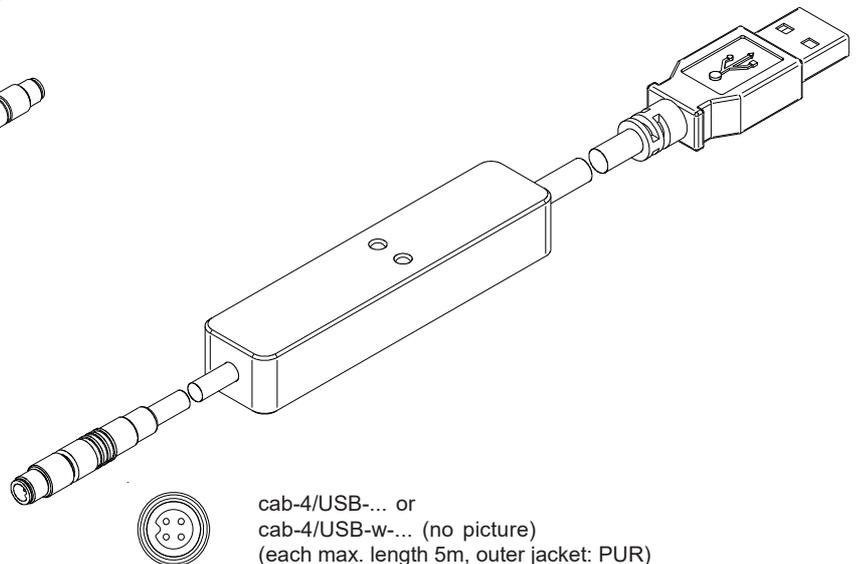

cab-4/USB-... or
cab-4/USB-w-... (no picture)
(each max. length 5m, outer jacket: PUR)



Function Principle

The edge detectors of RED series primarily are designed for detecting and counting edges. These may be e.g. newspapers, single sheets, cardboard boxes, sheet metals, wires, lamellas, welds, rotor blades, etc. In its optimum operating range (e.g. 110 mm when RED-110-...) sheet edges starting from 0.05 mm are reliably detected.

The sensor is characterised by a high scanning frequency and by its ability to automatically adjust itself to differently bright and dark, as well as slow and fast objects; with a minimally set output pulse length (adjustable via software) it reaches a switching frequency of 60 kHz. Furthermore the sensor can be used for almost all conceivable applications by selecting optimised software algorithms.

The RED sensor allows highly flexible signal acquisition. The sensor, for example, can be operated in alternating-light mode (AC mode), which means the sensor is not influenced by external light, or in constant-light mode (DC mode), which provides outstanding high-speed sensor operation. With the stepless adjustment of the integrated light source, the selectable gain of the receiver signal, and an INTEGRAL function the sensor can be adjusted to almost any surface.

A micro-controller performs 12-bit analog/digital conversion of the analog signal, which allows recording and evaluation of the signal. Furthermore the RED sensor offers various options for intelligent signal processing such as e.g. dirt accumulation compensation.


Parameters and measurement values can be exchanged between PC and sensor either through RS232 or Ethernet (using an Ethernet converter). Through the interface all the parameters can be stored in the non-volatile EEPROM of the sensor.

The PC software facilitates the parameterisation, diagnostics, and adjustment of the sensor system (oscilloscope function). The software furthermore provides a data recorder function that automatically records data and stores them on the hard disk of the PC.

Function principle of the RED-... sensor:

The laser sensors of RED series comprise a laser transmitter (laser diode, $\lambda=670$ nm) and two receivers. As shown in the picture below, the laser beam is focused at an angle onto the edge (of the magazine) opposite to the direction of feed. When an edge arrives, it blocks the beam path to receiver CH1, whereas the signal at receiver CH0 slightly increases due to the more favourable angle of impingement! The standardised value of SIGNALS CH0 and CH1 is used as the starting signal SIG for all the further algorithms of the sensor.

- The evaluated signal can be output via a voltage output or via a current output. With the help of the software, different evaluation modes for the analogue signal can be selected.
- The state of the output signal is output via 2 digital outputs depending on the evaluation mode.
- A digital input allows external „teaching“ of the sensor.
- Another input enables a „freezing“ of the analog output signal with a positive signal edge.

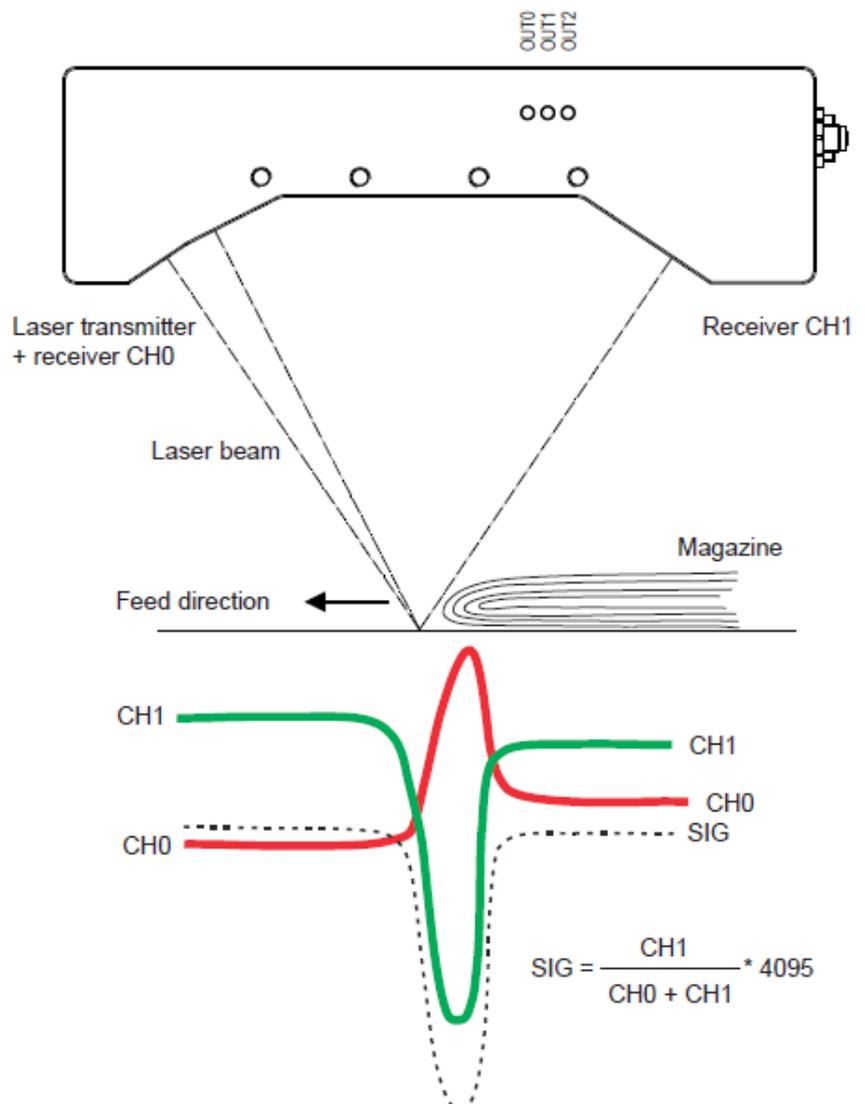




LED Display

LED display:


By means of the two LEDs the physical state of the two outputs OUT0, OUT1 and OUT2 is visualized.

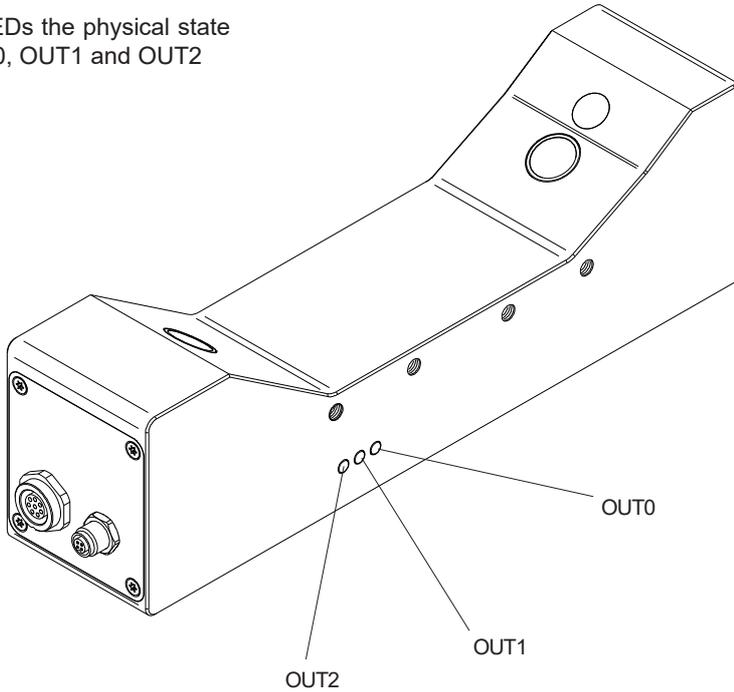

Laser Warning

The laser edge detectors RED-110-... comply with laser class 2 according to EN 60825-1. The use of these laser transmitters therefore requires no additional protective measures.

The laser edge detectors RED-110-... are supplied with a laser warning label.

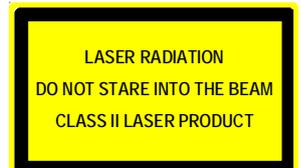




Parameterization

Windows® user interface:

(The current software version is available for download on our website.)

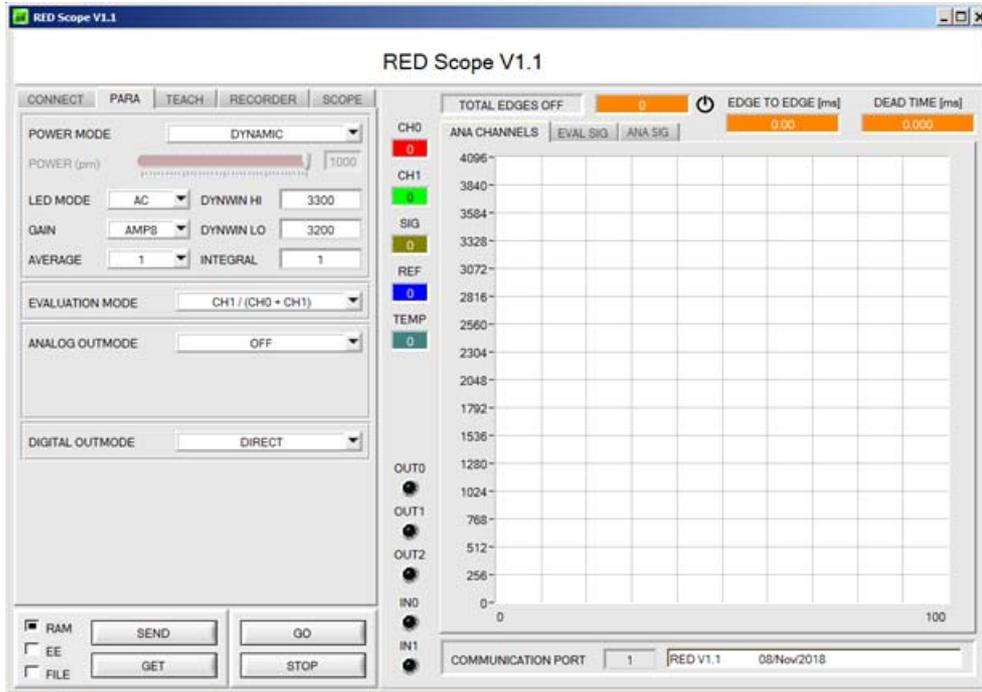


The PC software RED-Scope facilitates the parameterization, the diagnosis, and the adjustment of the sensor system (oscilloscope function). Moreover, the software features a data recorder function that allows the automatic recording of recorded data and the saving of those at the hard disk of the PC.

Parameters and measurement values can be exchanged between PC and sensor either through RS232 or Ethernet (using an Ethernet converter). Through the interface all the parameters can be stored in the non-volatile EEPROM of the sensor.



The SCOPE tab visualises an oscilloscope.

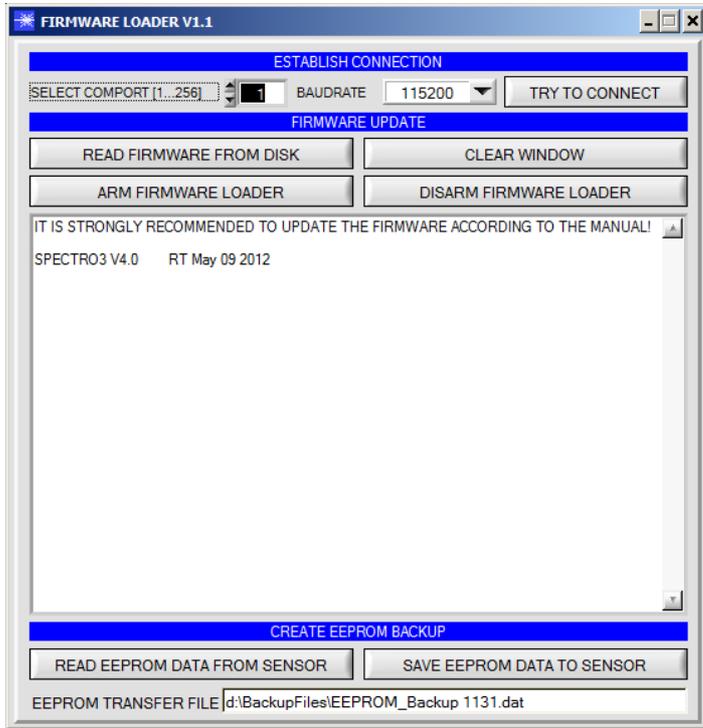**Firmware Update****Firmware update by means of the software „FirmwareLoader“:**

The software „Firmware Loader“ allows the user to perform an automatic firmware update. The update will be carried out through the RS232 interface.

An initialisation file (xxx.ini) and a firmware file (xxx.elf.S) are required for performing a firmware update. These files can be obtained from your supplier. In some cases an additional firmware file for the program memory (xxx.elf.p.S) is also needed, and this file will be automatically provided together with the other two files.